DSLR 15mm BASE

Included:

3mm allen wrench

3/16" allen wrench

(2) 1/4-20 x 1/2" socket cap screws

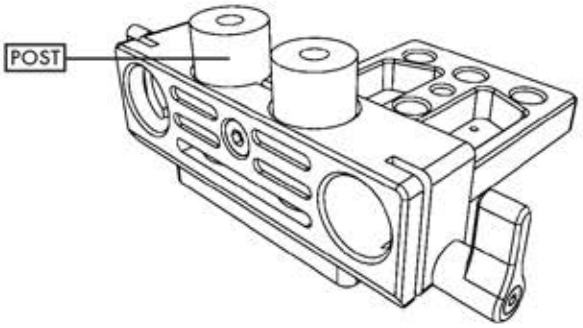

INSTALLATION

1. Align holes on **DOVETAIL** with **POSTS**
2. Insert (2) 1/4-20 socket cap screws and tighten

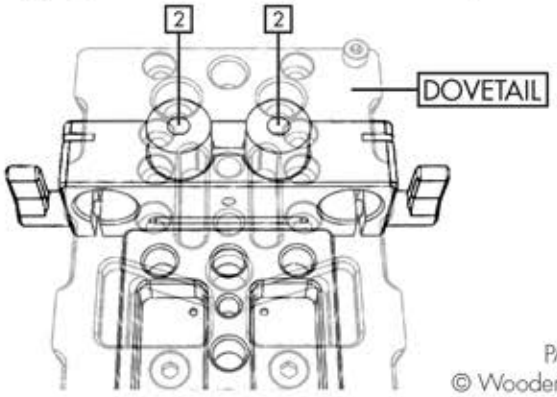

3. Loosen M4 screw and adjust **DOVETAIL** height
4. Find proper lens height for camera
5. Tighten M4 screw

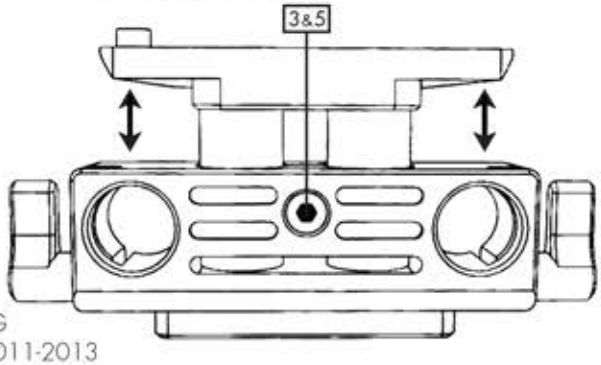

PATENT PENDING
© Wooden Camera LLC 2011-2013

DSLR 15mm BASE

Included:

3mm allen wrench

3/16" allen wrench

(2) 1/4-20 x 1/2" socket cap screws

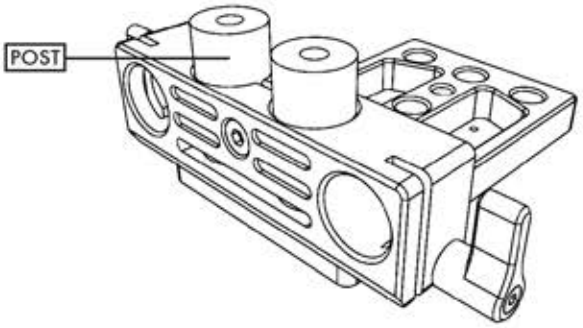

INSTALLATION

1. Align holes on **DOVETAIL** with **POSTS**
2. Insert (2) 1/4-20 socket cap screws and tighten

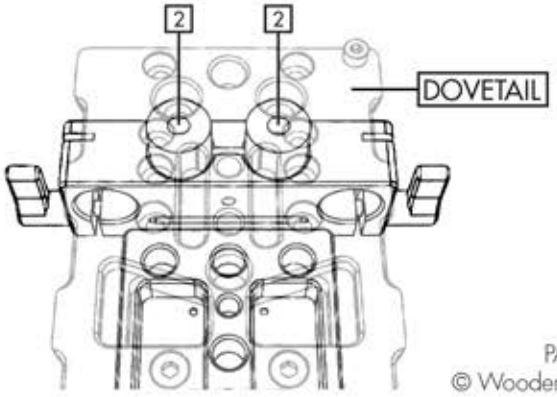

3. Loosen M4 screw and adjust **DOVETAIL** height
4. Find proper lens height for camera
5. Tighten M4 screw

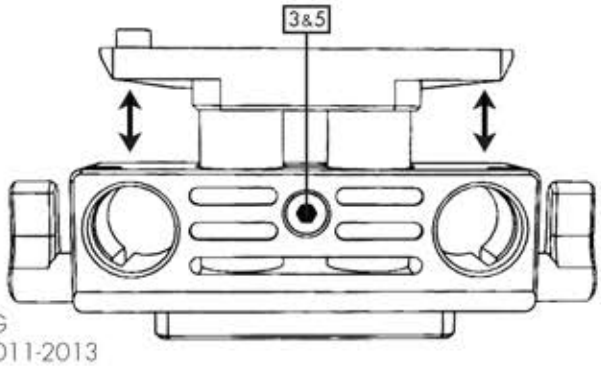

PATENT PENDING
© Wooden Camera LLC 2011-2013